

How to create the updated CD from zip files

Before updating CDR310, please confirm you have the updated CD.

Follow the below instructions to create the updated CD from the updated zip files.

- 1) Unzip CDR310_XXX.zip (XXX equals to version number ex.) ver1.01 → 101)
- 2) When unzipping has been completed, CDR310_XXX.iso image will be created automatically.
- 3) Then write CDR310_XXX.iso image to CD-R. The method you should use for writing ISO file image depends on the software you use. Please refer to the several methods below. For more information, follow the instructions in the manual for writing software.

Caution) Please set the CD burn speed at slower level.

1. EasyCD Creator (Roxio)

You can use EasyCD Creator to create a CD from an ISO file. You must purchase this program from Roxio. When the program is installed, it is automatically associated with the ISO file extension in Windows Explorer. For more information about this program, visit the Roxio Web site at:

<http://www.roxio.com>

Steps to create a CD if you have installed EasyCD Creator:

1. Unzip the CDR310_XXx.zip and CDR310_XXX.iso update CD image to a folder on your computer.
2. Insert a blank CD in your CD-RW drive.
3. Start Windows Explorer.
4. Locate the ISO file, right-click the file name, and then click Open to start EasyCD.
5. In the Write Method section of the CD Creation Setup dialog box, click Disk at Once for optimum recording performance.
6. Click OK to write the image to the CD.

2. Nero - Burning ROM (Ahead Software)

You can use Nero Burning ROM to record a CD from an ISO file. You must purchase this program from

Ahead Software. For more information about this program, visit the Ahead Software Web site at:

<http://www.ahead.de>

Steps to create a CD if you have installed Nero - Burning ROM:

1. Unzip the CDR310_XXx.zip and CDR310_XXX.iso update CD image to a folder on your computer.

2. Insert a blank CD in your CD-RW drive.
3. Start Nero Burning.
4. Follow the wizard steps to select Data CD creation.
5. When the wizard closes, click Burn Image on the File menu.
6. In the Open dialog box, select the ISO file, and then click Open.
7. In the wizard, click Burn to write the image to the CD.


3.ISO Recorder Power Toy (Freeware)

ISO Recorder is a Windows XP freeware utility that uses native Windows XP functions to write images to a CD. You can download this utility from the author's Web page. When the program is installed, it is automatically associated with the ISO file extension in Windows Explorer.

For more information about this utility, visit the author's Web page at <http://isorecorder.alexfeinman.com/isorecorder.htm>

Steps to create a CD if you have installed ISO Recorder Power Toy:


1. Unzip the CDR310_XXx.zip and CDR310_XXX.iso update CD image to a folder on your computer.
2. Insert a blank CD in your CD-RW drive.
3. Start Windows Explorer.
4. Locate the ISO file, right-click the file name, and then click Copy image to CD to open the ISO Recorder Wizard.

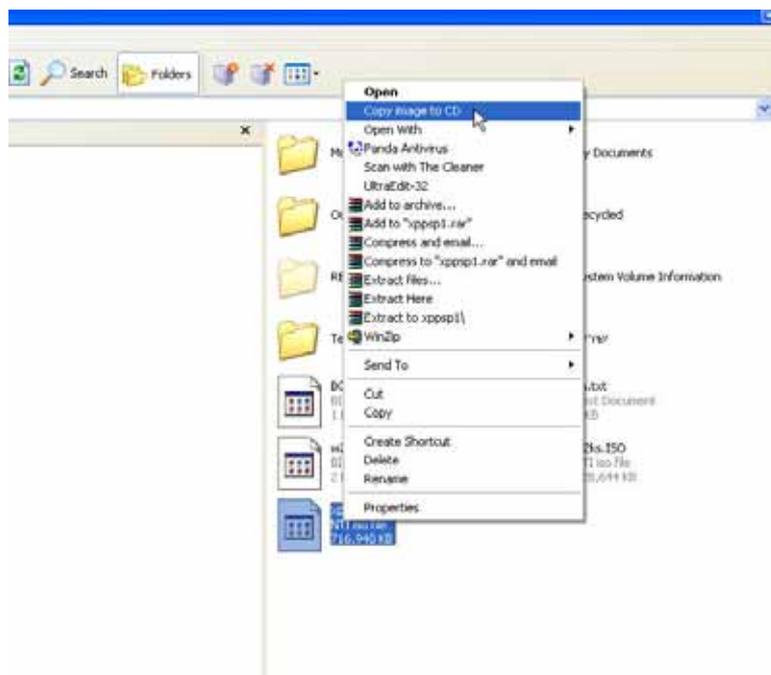


5. Follow the steps in the wizard to write the image to the CD.

Another alternate method:

1. You can also right-click your CD-R drive and choose Copy Image to CD.

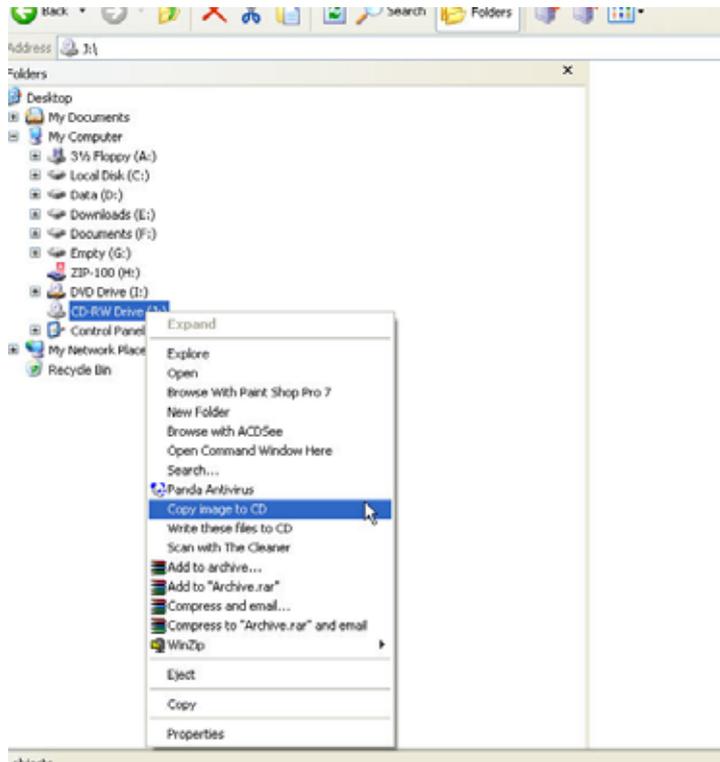

2. In the new window browse to the ISO file and click Next.

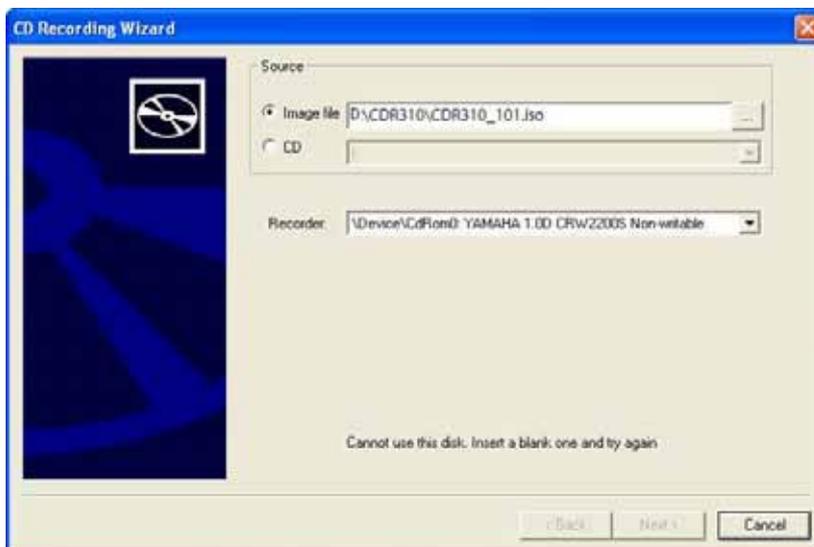

This documents were drawn by reference to the below homepage.

http://www.petri.co.il/how_to_write_iso_files_to_cd.htm