


## Update Guide

## MODEL PMD661


Thank you for selecting the Marantz Professional PMD661 Handheld Recorder. We have updated the PMD661, adding new features to increase its functionality, and so that it will be even easier to use. Please update your unit according to the following procedures.

1. Copy the update file 'pmd661up.bin' to the root of a SD card.
2. Insert the SD card for updating into the loading slot of the main unit.
3. Turn the **POWER slide** switch ON with the AC adapter.

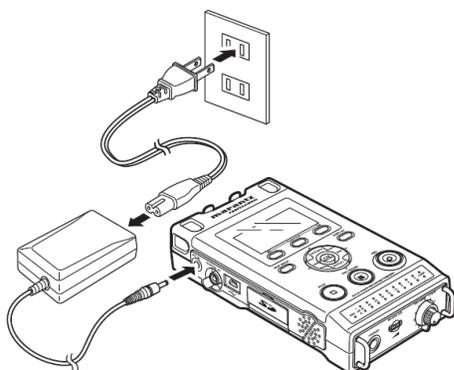

At this time, "Update AXXX?" is displayed in the display section. If this is not displayed, perform steps 6 - 8 and check the version.

4. Press the < button, and select "Yes".
5. If the **ENTER** button is pressed "Executing..." flashes in the display section, and update begins. When update has completed, the system automatically restarts.
6. To check the current main unit version, press the **MENU** button in STOP mode. At this time, the menu list is displayed in the display section.

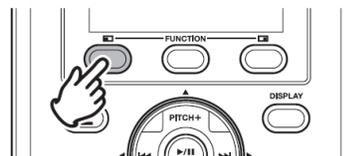

7. Press the **PITCH+** and **PITCH-** buttons to select "F/W Version". At this time, the selected menu item is highlighted.
8. If the **ENTER** button is pressed, the current version is displayed in the display section.
9. Turn the **POWER slide** switch OFF.

### Note:

You **MUST** use the AC adapter as the power supply.

If you do not use the AC adapter as the power supply, an error message will appear, and it will not be possible to update it. Please **DO NOT** touch and **DO NOT** disconnect power while the unit is being updated.

Before you update the unit, make sure that the power cable is firmly plugged into the PMD661 and into an AC outlet.

If the power is turned off accidentally while the unit is being updated, the PMD661 may not start up.