

5. FIRMWARE UPDATE

To enter the firmware update, press and hold the PLAY/PAUSE and REC button and turn the power on.

NOTE:

All menus are set default by update.

The firmware can be updated when the supply gets via AC adaptor.

1. Insert the update CD.
When no update CD is inserted, the display shows as below;

Insert CD
and reboot



Insert CD
or Cancel

2. When the update CD is inserted, the display shows as below;

UPDATE CD
Loading...



Update CD



HDD Vx.xx
ROM Vx.xx

5. ファームウェアのアップデート

PLAY/PAUSE キーと REC キーを押しながら電源を入れると CDR310 はファームウェアのアップデートに移行します。


注意：

アップデート後、すべてのメニューや設定は初期値になります。

ファームウェアのアップデート機能は AC アダプタの時のみ行われます。


1. Update CD を挿入してください。
Update CD が入っていない場合、上段 “UPDATE CD” 下段 “Insert CD” と “or Cancel” を交互表示します。

3. Press the JOG.
The display shows "FW Update?"

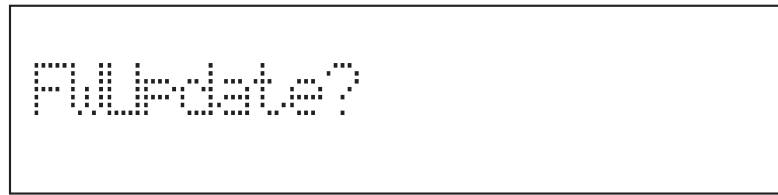



3. JOG を押します。“FW Update?” が表示されます。

4. Press the JOG again.
The display shows "Sure?"

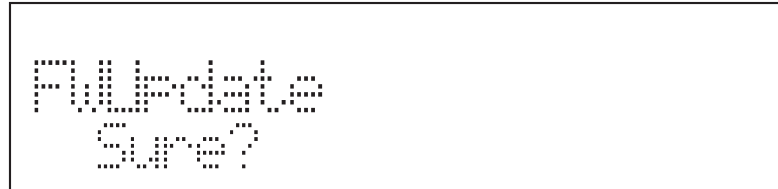


4. JOG を押すと“Sure?” と表示します。

5. To start the update, press the JOG.
“Updating..” is displayed in this processing.
When the update is finished, the display shows
“Completed”
If you cancel the update, press the CANCEL
button.

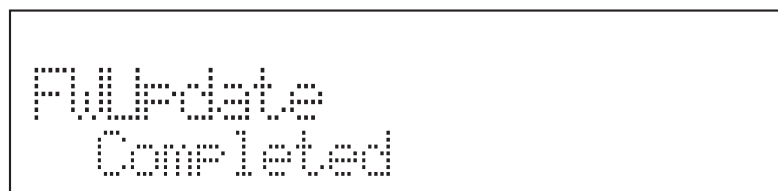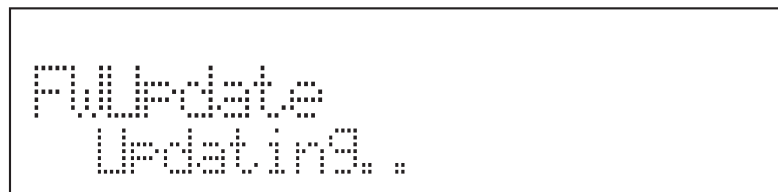


5. アップデートする場合は JOG を押します。
アップデートが開始され、その間 “Updating..” と表示
します。
アップデートが終了すると、“Completed” と 1 秒間表
示されます。
キャンセルする場合は CANCEL キーを押します。

6. To initialize the EEPROM, turn the JOG and
select “Initial”, and then press the JOG.

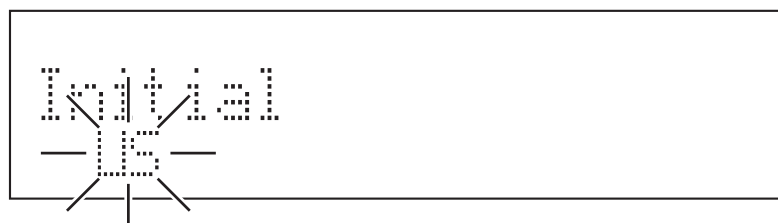

6. その後 EEPROM Initialize に移ります。Initialize Mode
を JOG で選択し、JOG を押します。

7. Press the JOG to reboot.

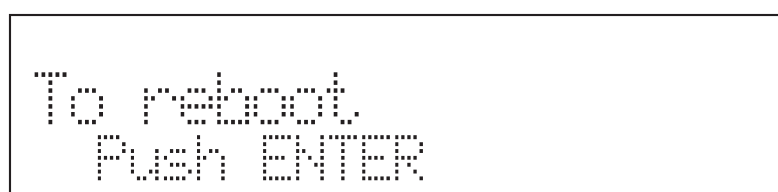

7. “To reboot” “Push ENTER” と表示します。JOG を押すと、
Reboot されます。